

## Operating Instruction



- Display BAR, PSI measurement
- Works on a nitrogen system

**Manufacturer reserves the right to change product features at any time**



1. Remove tire valve cap.
2. With clip-on air chuck lever depressed, firmly press chuck onto tire valve stem and release lever, ensure that no air leaks.
3. Press the grip to inflate, press the grip half-way to deflate.
4. Max. Inlet Pressure 12 Bar/175 Psi, Measuring Range: 0-12 Bar (0-175 Psi). Reading Accuracy is 0.1 Bar (2 Psi).
5. **Important: To avoid the risk of personal injury, esp. to the eyes, face or skin, DO NOT direct the stream at any person.**

**This Tire Inflator has been tested in its normal working position on test equipment with an accuracy that is traceable to National Standards According to: 86/217/EEC.**

**+/-0.08 bar up to and including 4 bar**

**+/-0.16 bar between 4 bar and 10 bar inclusive**

**+/-0.25 bar greater than 10 bar**

Serial Number :

Date :

Reference Pressure <input checked="" type="checkbox"/> BAR <input type="checkbox"/> PSI	2.0	4.0	6.0	8.0
Display Pressure <input checked="" type="checkbox"/> BAR <input type="checkbox"/> PSI				