

7.5L In Line Filling System With Return Line

The unit is designed to fill fluid in transmission, differentials and transfer cases.

Operating Instruction

1. Open the filling cap on the reservoir. Fill in dispensing fluid.
2. Tank capacity is 7.5 L.
3. Find the suitable adaptor from the selection and connect to the vehicle.
4. Connect the adaptor with dispensing hose.
5. Push-pull the dispensing handle to begin the operation.

Note: Some transmission need to return excess fluid back to filling unit. In this case, open the return line valve on the side of the pump assembly. The excess fluid will be returned and viewed in the hose.

Attention Before Operating

1. Viscosity Range: up to SAE 140
2. Output Capacity: 70 cc / cycle

Optional Accessory

1. Mechanical Lub Meter

AT-101
FORD



AT-102
Universal (BMW, HONDA, NISSAN, ETC)



AT-103
VW/AUDI



AT-104
VW/AUDI, PORSCHE



AT-105
VW/AUDI, MINI COOPER



AT-106
MERCEDES 722.9



AT-107
DSG



AT-108
VW/AUDI CVT



AT-109
VOLVO



AT-110
TOYOTA/LEXUS



AT-111
SKODA

