



1. Turn on and set target pressure to 30 psi.



2. Press "SET" twice. "OPS" flashes on screen.



3. Press "+" to set OPS value(10psi).



4. Press "SET" to confirm.



5. Connect with air source.



6. Press "SET" 3 times





7. Press “+” to inflate manually

8. Bars rolling and device starts workin



9.It inflates till the target pressure +OPS value



10.Then recovers to the target pressure.

After finish inflating ,the beeper alarms to remind users.